 


newyoo®

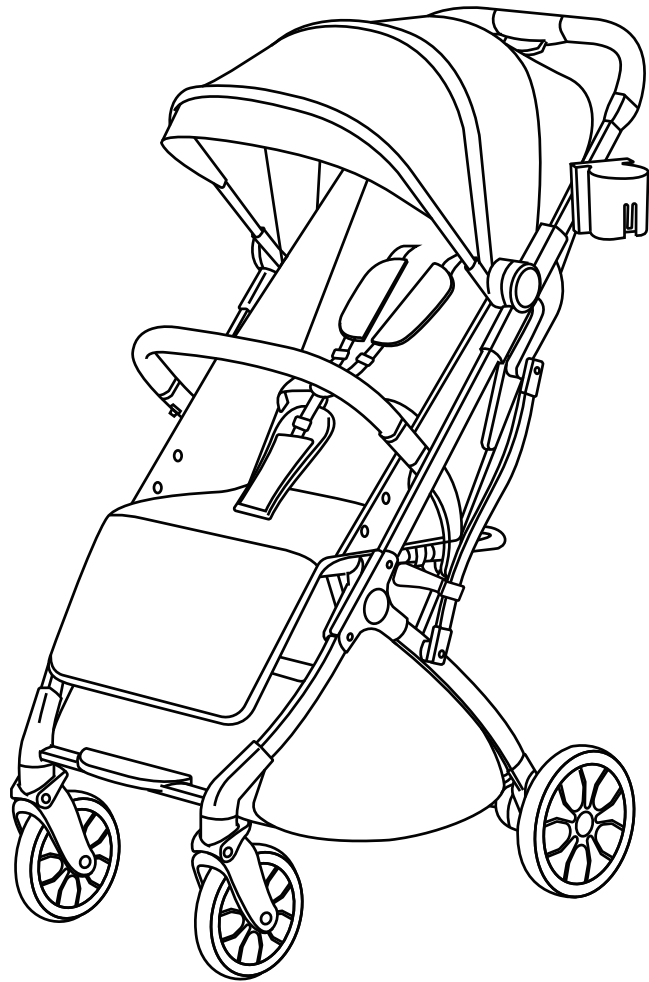

TR18-M

Thank you

With newyoo, your child enjoys the best in safety, quality, and design. Cherish every moment together.

For replacement parts, service, or additional warranty questions, please contact our customer service department. **Please have your proof of purchase, order number, and model number ready when you contact us.**

Email: support@newyoo.net

Website: www.newyoo.net

ASSEMBLY INSTRUCTIONS:



Assembly Video



Store

⚠ WARNING:

Improper assembly, maintenance, or use can lead to serious injury.

It is highly recommended to follow the video instructions for assembly and adjustments.

**IMPORTANT!
KEEP THESE
INSTRUCTIONS FOR
FUTURE REFERENCE:
READ CAREFULLY**

Contents	1
Warnings	2
Child Usage Requirements	2
Parts List	3
Product Setup	4-5
Product Use	6-11
Cleaning and Maintenance	12

WARNING!

Failure to follow these warnings and instructions could result in serious injury or death.

A child's safety is your responsibility. **NEVER** leave your child unattended.

To avoid any danger of suffocation, remove all plastic covers before using the stroller and destroy or keep away from babies and children! Keep small parts away from children as they pose a choking hazard. Discontinue using the stroller if it becomes damaged or broken.

DO NOT make any changes or modifications to the stroller that are not specified in this manual.

Use original newyoo parts and accessories only.

Overloading, incorrect folding, and using accessories other than those approved by newyoo, e.g. child seats, bag hooks, rain covers, buggy boards, etc., may damage or make the stroller unsafe.

Use of the stroller with a child weighing more than 33 lb (15 kg) will cause excessive wear and stress on the stroller, and could create an unstable condition. Use the stroller with only one child at a time.

To prevent a hazardous, unstable condition, do not place more than 4.41 lb (2 kg) in storage basket, and never place purses, shopping bags, parcels or other items on the handle or canopy.

DO NOT use storage basket as a child carrier. Avoid serious injury from falling or sliding out.

ALWAYS use seat belt. After fastening buckles, adjust belts to get a snug fit around your child. Child may slip into leg openings and strangle.

NEVER use in reclined carriage position unless the calf support is raised to cover the front opening and the fabric flaps are snapped to the side of the stroller seat.

AVOID FINGER ENTRAPMENT Use care when folding and unfolding the stroller. Be certain the stroller is fully erected and locked before allowing your child near the stroller.

DO NOT let your child play with the stroller.

ALWAYS keep your child in view while in the stroller.

NEVER allow your child to stand on the stroller.

The parking brake **MUST** be engaged when the stroller is stopped and when placing and removing child.

The stroller is to be used only at walking speed and is not intended for use while jogging, skating, etc.

Child Usage Requirements

This stroller is suitable for use with children who meet the following requirements:




Weight: up to 33 lb (15 kg)

Suitable for children aged 0 to 36 months.


Parts List

Make sure all parts are available before assembly. If any part is missing, please contact support@newyoo.net. No tools are required for assembly.

1. Stroller Frame
2. Bumper Bar
3. Cup Holder
4. Rear Wheel (x2)
5. Canopy
6. Fabric Flaps
7. Footrest
8. Frame Latch
9. Shoulder Harness Pad
10. Secondary Lock
11. One-Hand-Fold Button
12. Handle
13. Toggle Button
14. Toggle Loop
15. Storage Pocket
16. Mesh Ventilation Window
17. Recline Adjustment Button/Folding Release Button
18. Storage Basket
19. Rear Wheel Release Button
20. Rear Brake Lever
21. Storage Bag

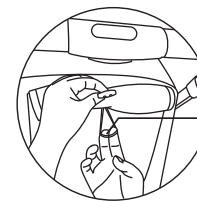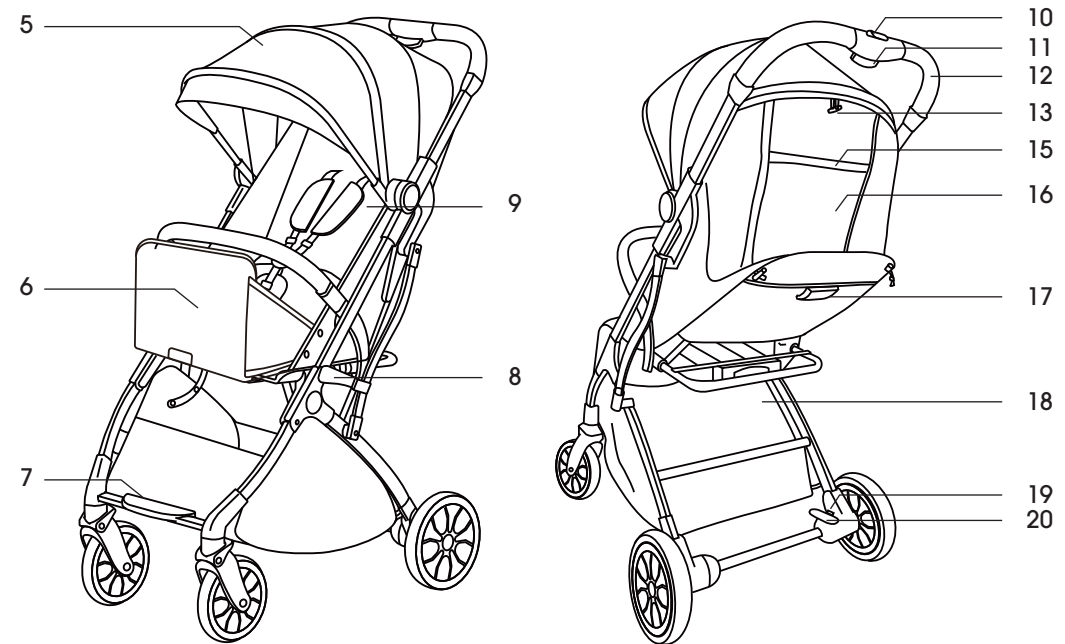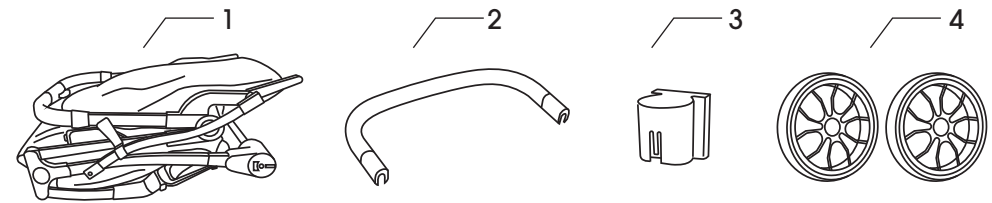

14


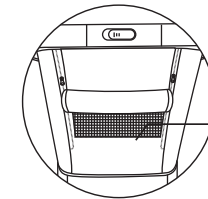


16

Product Setup




Open Stroller

1. Take the stroller frame out.
2. Release the frame latch by pulling it outward and unfold stroller frame by pulling upward on the stroller handle until the frame locks
3. A “click” sound means the stroller frame is open completely.
Check that the stroller is completely latched open before continuing.

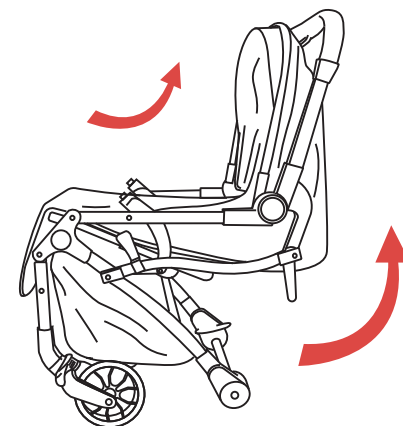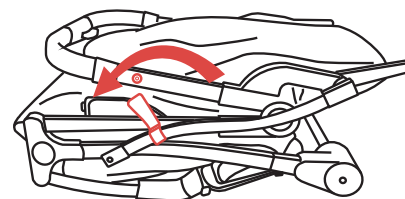

Rear Wheels



1. Insert the rear wheels into the rear legs. A “click” sound means the rear wheel is assembled completely.
- ⚠ Check that the wheels are securely attached by pulling on them.
2. To remove the rear wheel, pull the Rear Wheel Release Button upwards and detach the rear wheel from the rear leg.

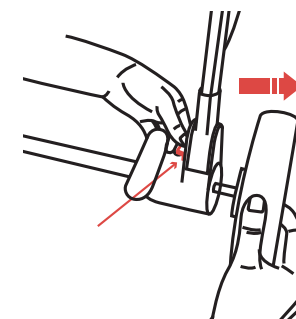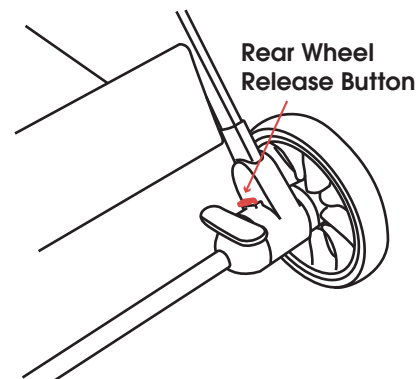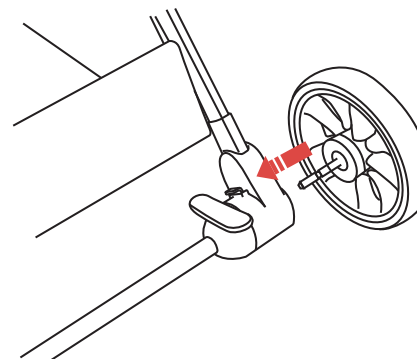

Bumper Bar

! It is always recommended that the bumper bar be used, but it is not a restraint device. Always secure the child with the harness.

1. Align the bumper bar with the mounts and place it until both ends lock securely, ensuring a "click" sound to confirm it's properly assembled.
2. To remove the bumper bar, press the bumper bar release buttons and pull the bumper bar out.

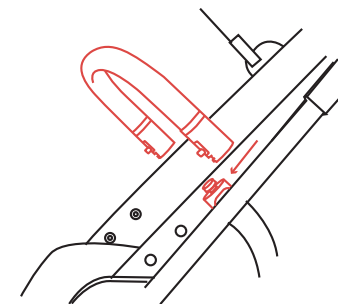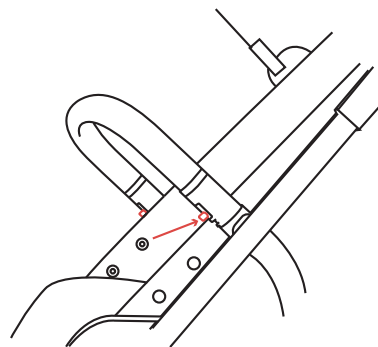


Cup Holder

Slide cup holder down onto mount on stroller frame.

! Please make sure to install the cup holder on the left side of the stroller.

Check Setup

- Stroller frame is latched open
- Rear wheels are securely attached
- Bumper Bar is securely attached
- Cup holder is securely attached

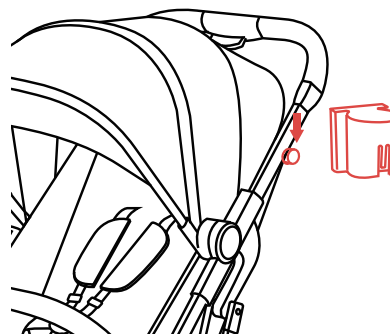


Product Use

Securing Your Child

⚠ The parking brake **MUST** be engaged when the stroller is stopped and when placing and removing child.



To avoid serious injury from falling or sliding out, always secure your child with the harness.

1. To secure the child, place the safety harness around the child's waist and over the shoulders. Place the crotch strap between the child's legs. Insert the male end of each shoulder/waist belt into the buckle on the crotch strap. Tighten all buckles to the proper fit for the child.
2. Press the center buckle to release the safety harness.

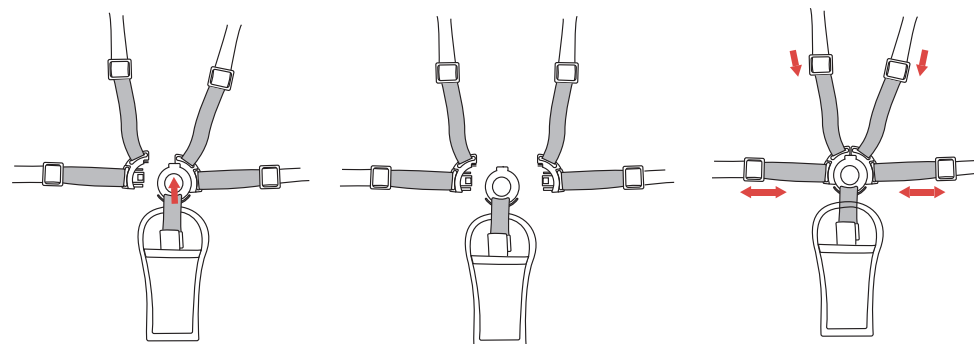


Canopy

Open the zipper on the canopy for extra shade.

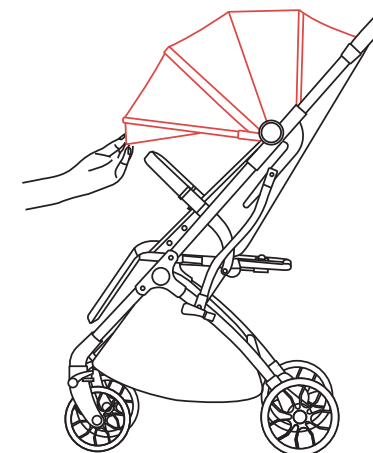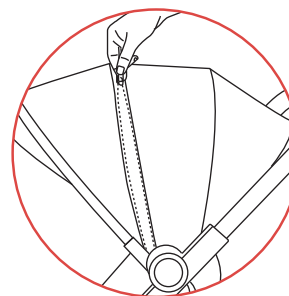


Storage Pocket

Flip open the fabric to use the storage pocket underneath.

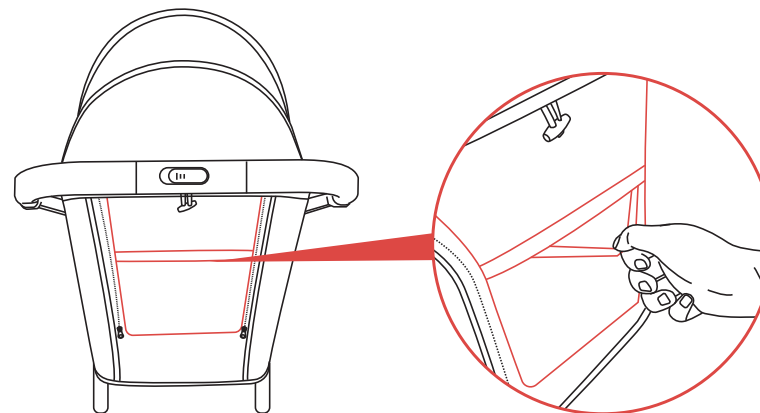




Mesh Ventilation Window

1. For added air flow, unzip the back zipper to expose the mesh.
2. To open the Mesh Ventilation Window completely, locate the toggle loop beneath the fabric, roll up the fabric, thread the loop through the toggle button. Tighten the toggle to fasten the rolled-up fabric in place.

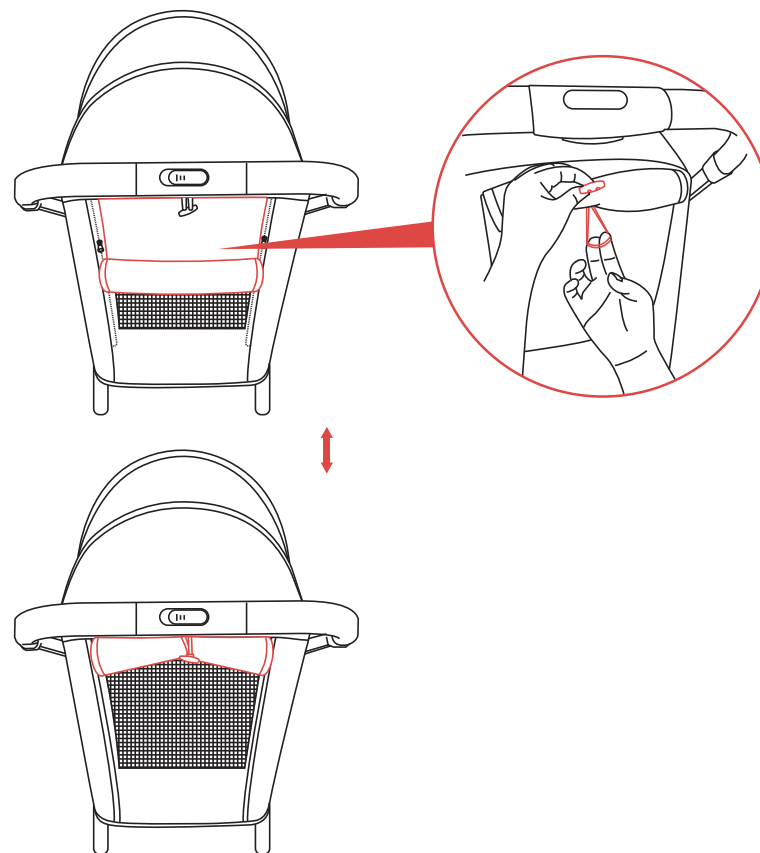

Recline

1. To raise the recline, push the backrest up. A “click” sound means the backrest is fully adjusted.
2. To recline the backrest, lift up the Recline Adjustment Button and adjust the backrest to the position you desire.

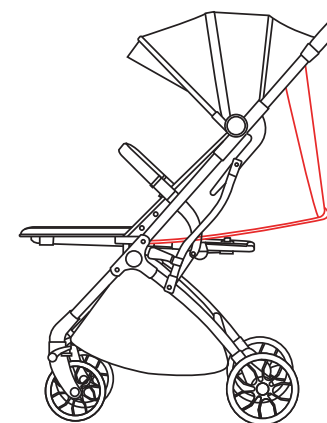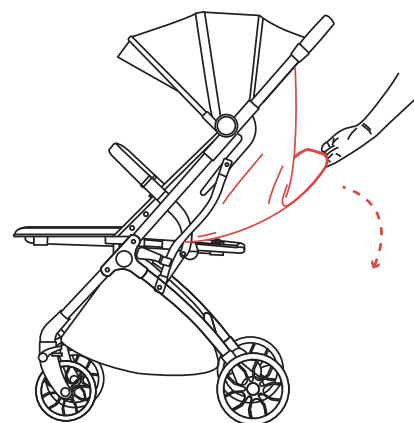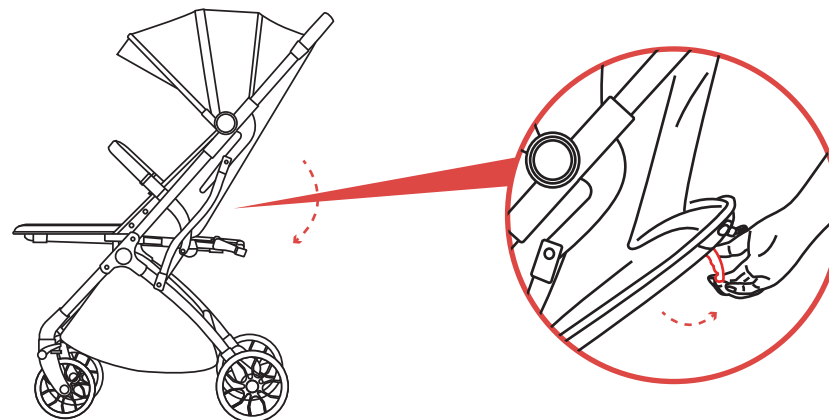

Calf Support

1. To raise the calf support, lift it up, then pull the telescoping handle out from the bottom.


Full Recline

Child may slip into leg openings and strangle.

NEVER use in reclined carriage position unless the calf support is fully raised to cover the front opening and the fabric flaps are snapped to the side of the stroller seat.


DO NOT use enclosure with an older child that can push up on hands and knees or crawl out.

2. Fully recline the seat, and pull the flaps out from the bottom of the calf support.
3. Fasten the flaps to the snaps on the outside of the seating area on both sides of the seat.

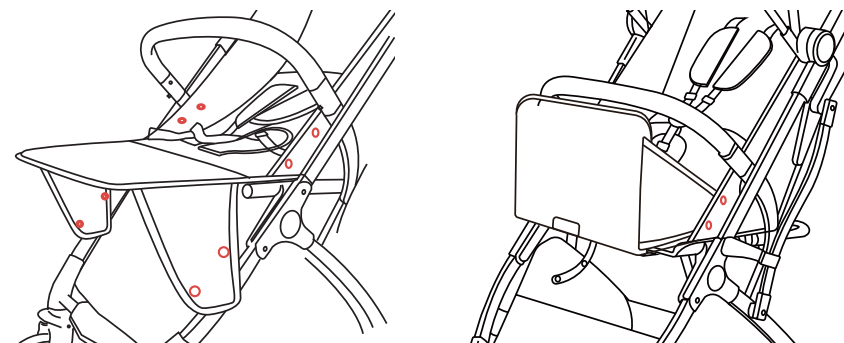




Brake

1. To lock the rear wheels, step on rear of brake lever.
 2. To unlock the rear wheels, step on front of brake lever.
- ⚠ Always apply the brake when the stroller is stopped. Push the stroller slightly to ensure the brake is engaged.

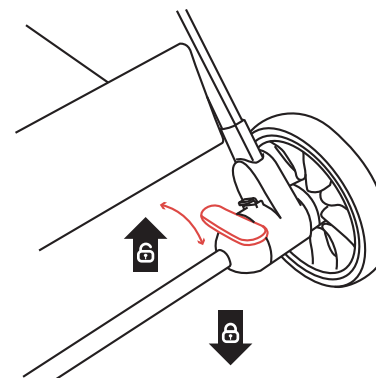

Fold



1. Slide the Secondary Lock to the left while squeezing the One-Hand-Fold Button.
2. Fold the handlebar forward to collapse the frame.
3. Use the frame latch to lock the stroller as shown.
4. The frame stands on its own with the **support bar**.

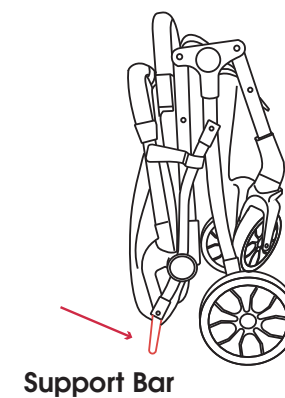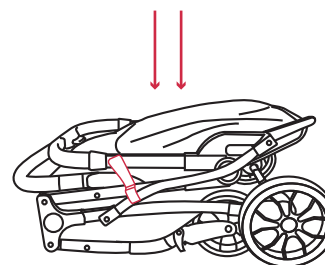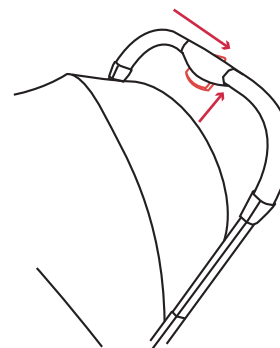

Telescoping Handle for Easy Pulling

Pull the handle out and adjust to your desired height.

After adjustment, simply push the stroller to start walking.

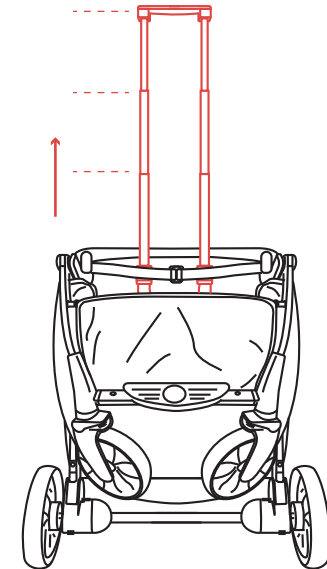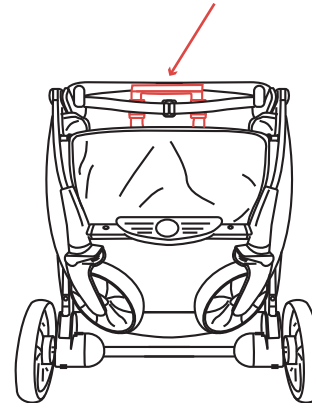

Cleaning and Maintenance

Clean the frame, plastic parts, and fabric with a damp cloth, but do not use abrasives or bleach.

Do not use silicon lubricants as they will attract dirt and grime.

Do not store your stroller in a damp place.

Clean the stroller wheels regularly with water and remove any dirt.

To ensure long-lasting use, wipe off this product with a soft, absorbent cloth after using it in rainy weather.

Refer to the care label attached to the fabric for washing.

It is normal for fabric to color from sunlight and to show wear and tear after a long period of use, even when used normally.

Contact

+01 (323) 218-9310

www.newyoo.net

support@newyoo.net

2108 N ST STE N SACRAMENTO, CA 95816

Production Information

Certified to meet or exceed U.S. CPSC safety regulations, ASTM F833-21 standards, and CPSIA 2008 requirements

Importer: Sagacity trek inc

2108 N ST STE N SACRAMENTO, CA 95816

Manufacturer: Hubei Tianrui Tiancheng Industryand Trade Co., Ltd

Next to national highway 348, Huayan town, Hanchuan city,
Hubei Province China

newyoo[®]

Email: support@newyoo.net

Website: www.newyoo.net