

NEWYOO

Thank you for your purchase. Contact **support@newyoo.net** for additional assistance assembling, using, repairing or maintaining your trike.

ASSEMBLY INSTRUCTIONS:



Assembly Video



How to Work



Amazon Store



Customer Support:

Support@newyoo.net



Business Contact:

Sales@newyoo.net




WARNING!

Improper assembly, maintenance, or use can lead to serious injury.
Please note that assembly and initial fitting require a Phillips head screwdriver.
It is highly recommended to follow the video instructions for assembly and adjustments.

Children's Tricycle and Balance Bike

Model: TR008

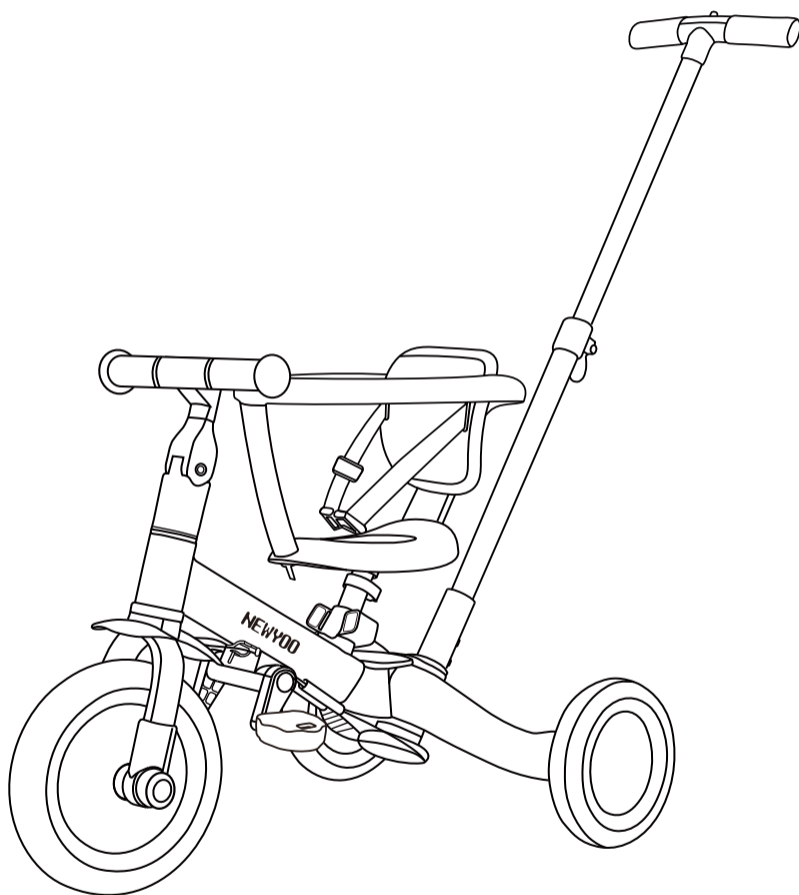


Read all instructions before assembly and use. Keep this manual for future reference.

WARNING: Failure to follow the instructions for assembly may result in defect, damage, or injury.


5 in 1 Balance Bike

1

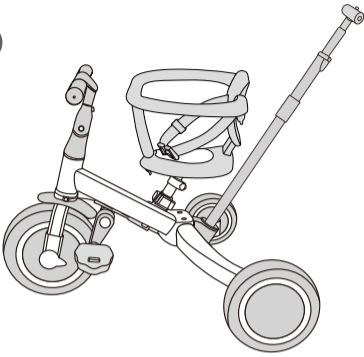


Push Tricycle Mode (12 Months+)

2

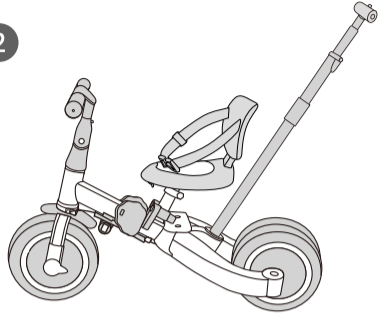


Push Balance Bike Mode (18 Months+)

3

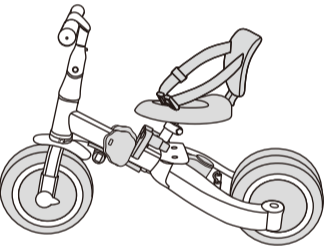


Balance Bike Mode (24 Months+)

4

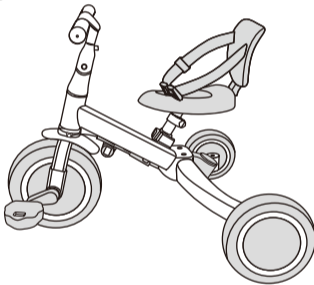


Tricycle Mode (30 Months+)

5

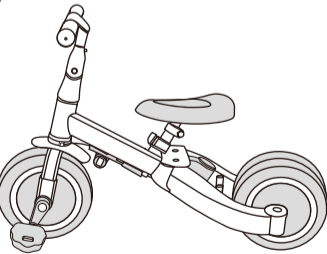


Bike Mode (34 Months+)


Parts List

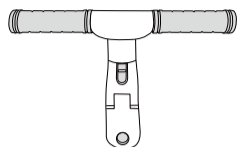

Handlebar

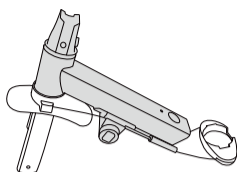


Front Frame




Rear Frame Assembly




Front Wheel




Seat

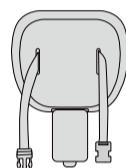

Backrest & Safety Belt

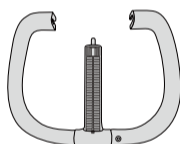


Guard Bar

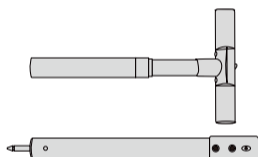

Upper Push Handle
Lower Push Handle




Seatpost Clamp

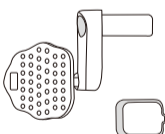

Pedal ×2
Black Plastic Spacer ×2



Hex Key

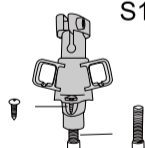

S1 set

Seat Post + Pedal Holder
M4 Self-tapping Screw
M10 Socket Head Screw




Phillips head screwdriver required, not included.

WARNING: Please check you have all the parts before assembly.


How to Assemble

1

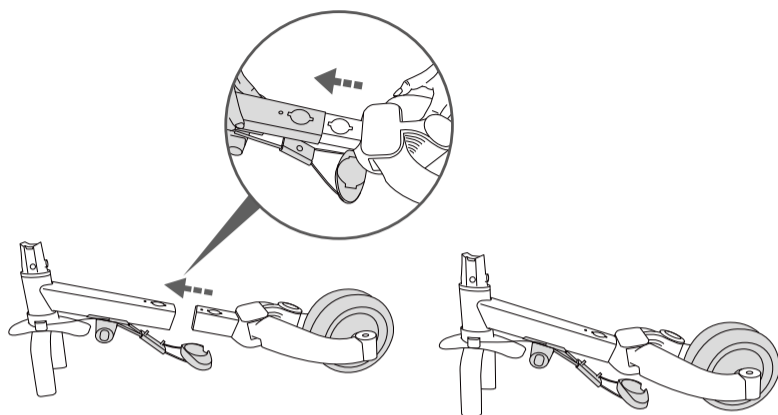


Align and insert the rear frame assembly into the front frame.

2

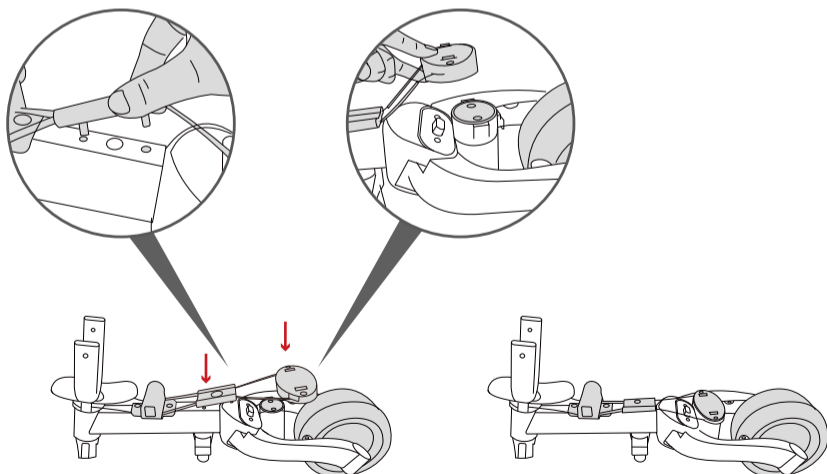


Turn the frame upside down, then align and assemble the steering cables according to the diagram. Give it a firm tap to secure them and prevent any loosening.

3

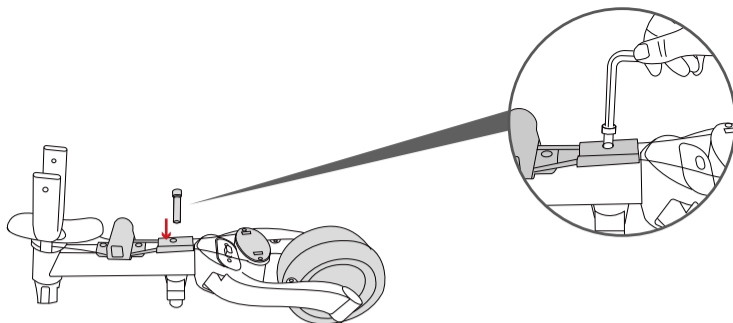

Tighten the M10 socket head screw using the provided hex key.


4

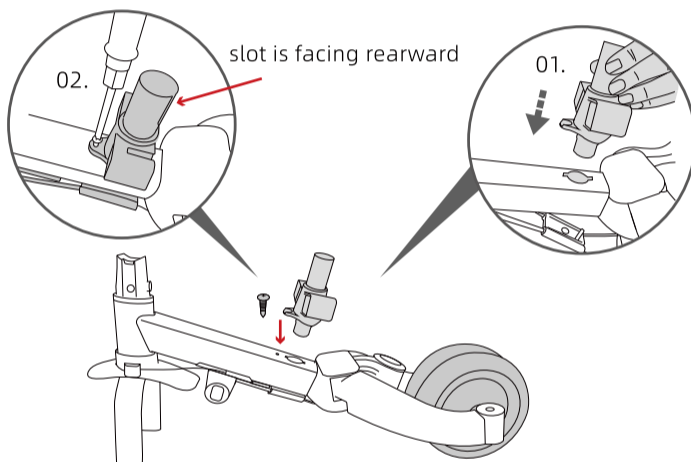

01. Insert the seat post and pedal holder assembly into the frame, ensuring **the seat post slot is facing rearward**.


02. Tighten the M4 self-tapping screw using a Phillips head screwdriver.

5

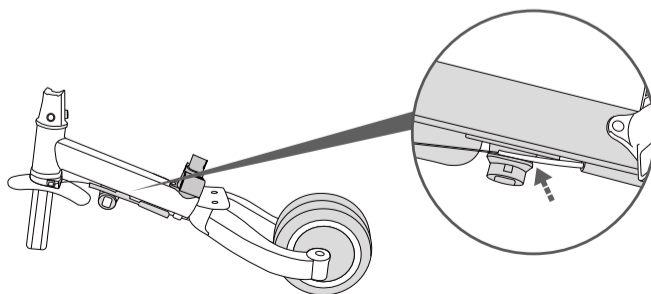

After assembling the frame and steering cables, ensure the cables are in the slots.

6

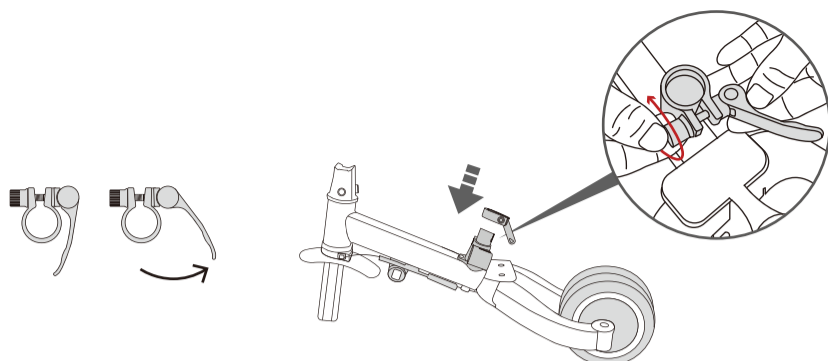


01. Open the Clamp Lever as shown.

02. Place it onto the seat tube.

03. Tighten the clamp bolt to secure the seat; otherwise, it may rotate.

7

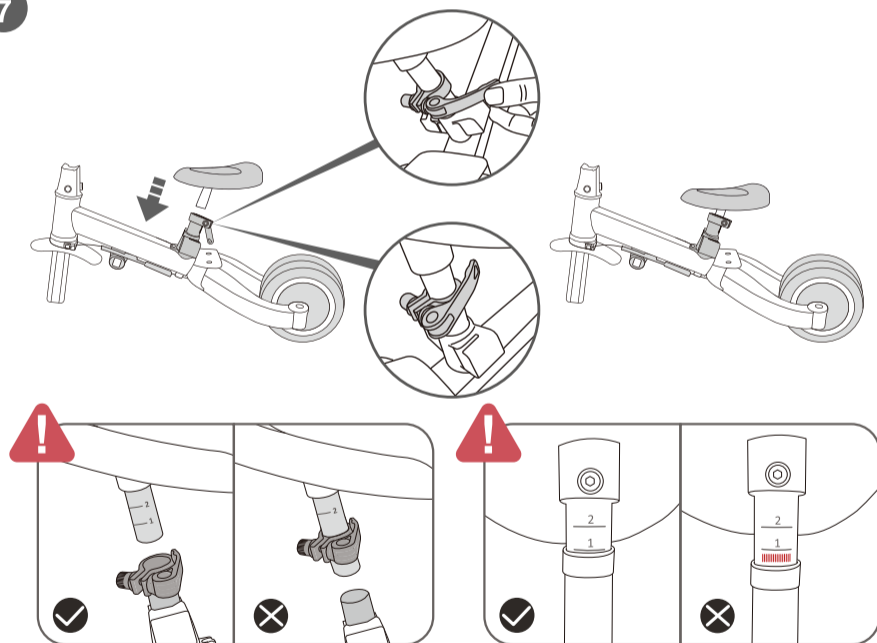

01. Insert the seatpost into the seat tube until it reaches the desired height for your riding position.


02. Once the seatpost is in position, close the quick-release lever to clamp the seatpost securely. You may need to apply some force to close the lever fully.

03. After closing the clamp lever, check the tension by trying to move the seatpost up and down. It should be securely held in place without any slippage.




WARNING: For safety, ensure the seat is installed at or above "mark 1." Inadequate insertion may cause the seat to detach.

8

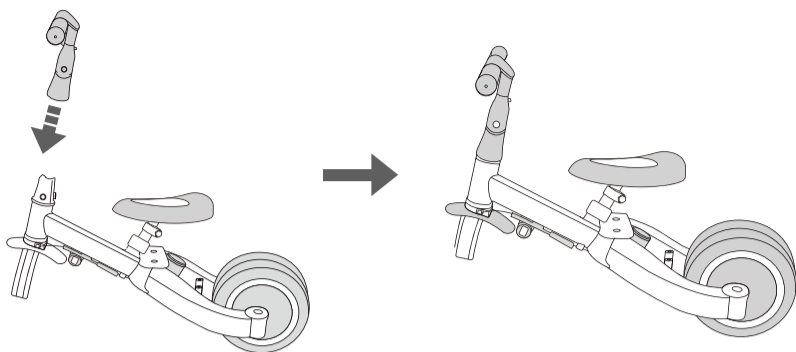


Make sure the handlebar is inserted fully and securely.

9

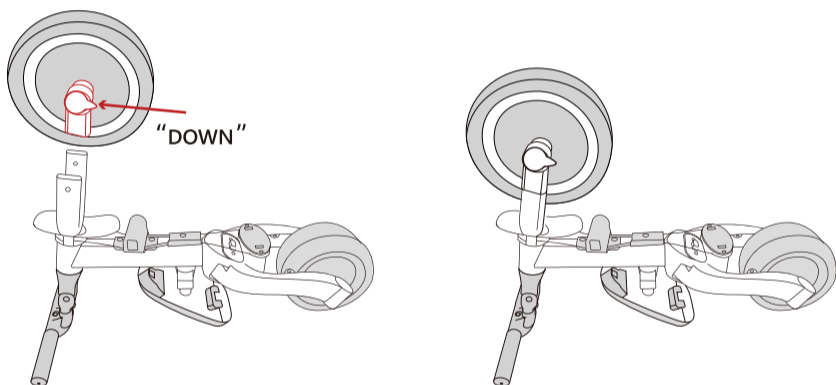


Insert the front wheel until you hear a "click"

10

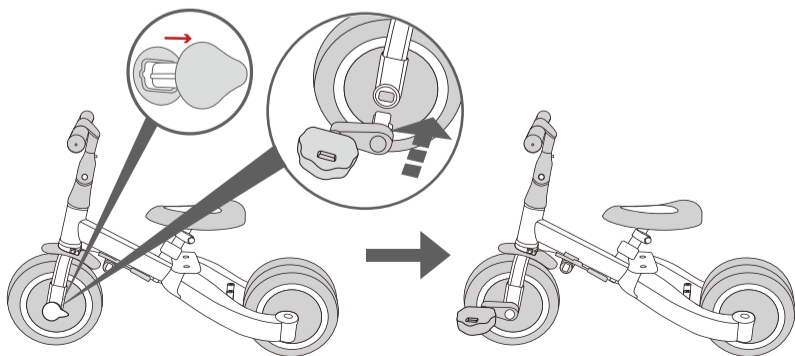

Remove the plastic cap, then insert the pedal into the front wheel until you hear a "click."


11

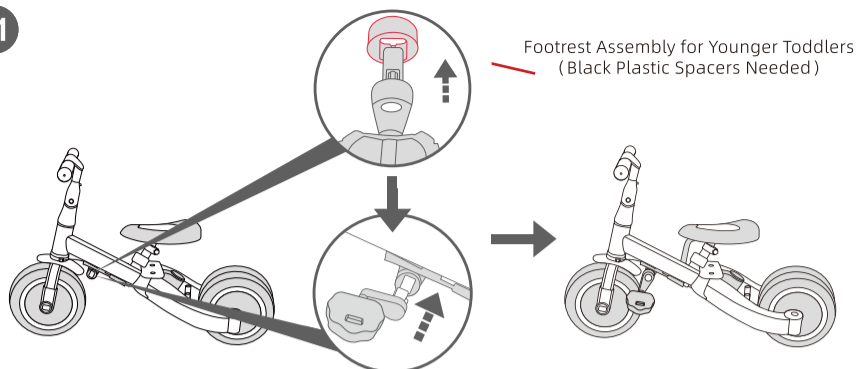

Place the black plastic spacer on the pedal, then insert the pedal into the slot at the bottom of the frame. **Not using the spacer may cause the pedal to get stuck and be difficult to remove.**


12

Separate the Rear Wheels

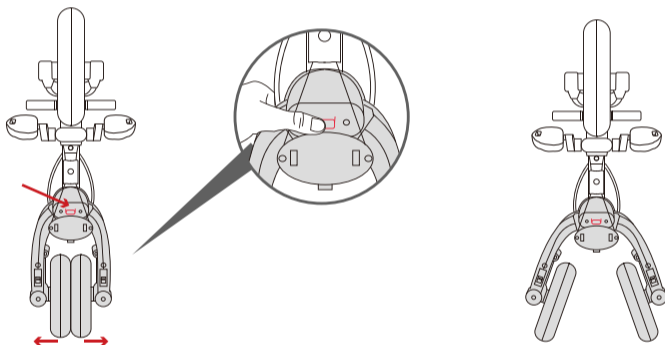


Turn the tricycle upside down, then use one hand to hold the button while separating the rear frame with the other hand.

13

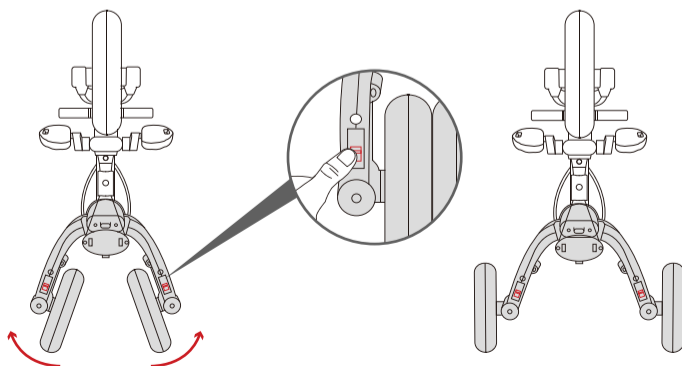

Push the button upward while rotating the rear wheels outward until you hear a "click"; otherwise, the rear wheels won't rotate.


14

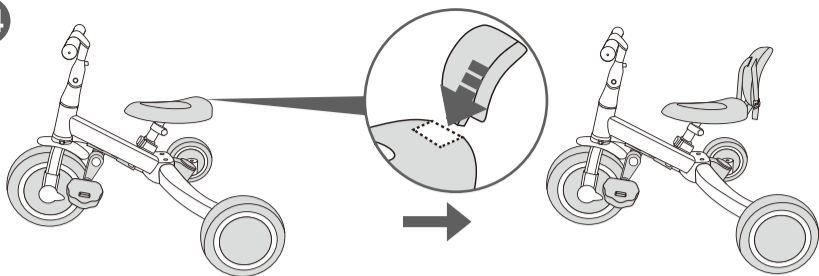

Tilt the backrest slightly and insert it into the seat, then give it a firm tap to ensure it is securely in place.


CAUTION: Improperly attached backrest may detach, causing a fall or injury.

15

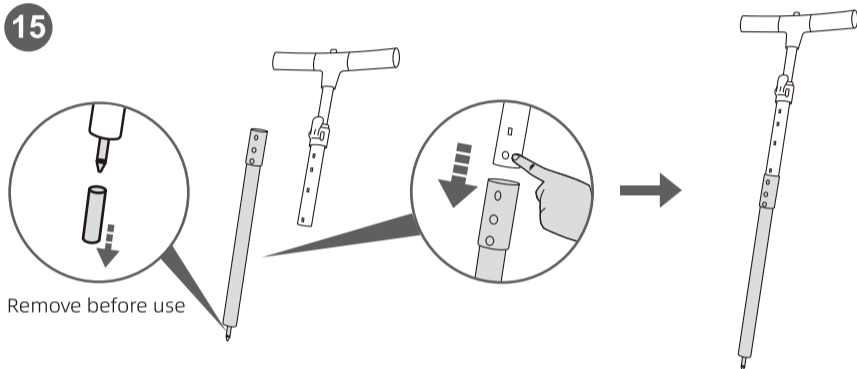

Press and hold the round elastic button on the upper push handle, then insert it into the lower push handle until you hear a 'click'.

16

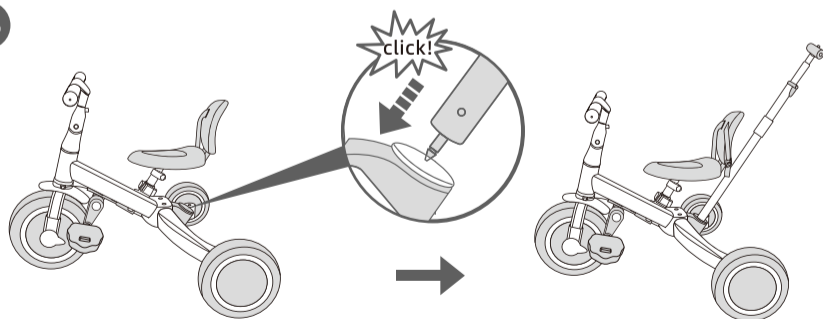


Insert the parent push handle into the frame until you hear a "click."

WARNING: The push handle is not designed to bear the full weight of the tricycle and rider. Always remove the child before transporting up or down stairs.


⚠ When not in use, the push handle must be stored securely out of reach of children and should never be used as a toy.

17

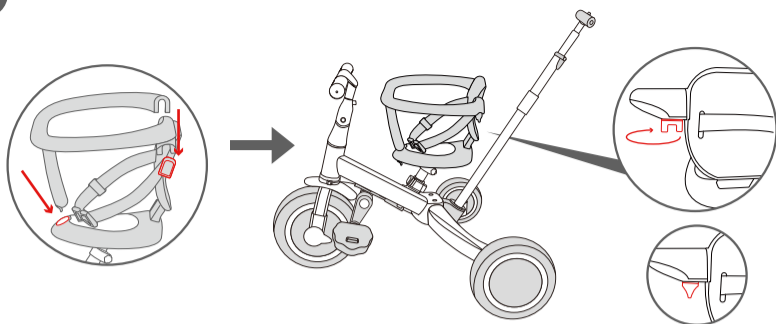


Install the guard bar as shown, and rotate the lock to secure.

18

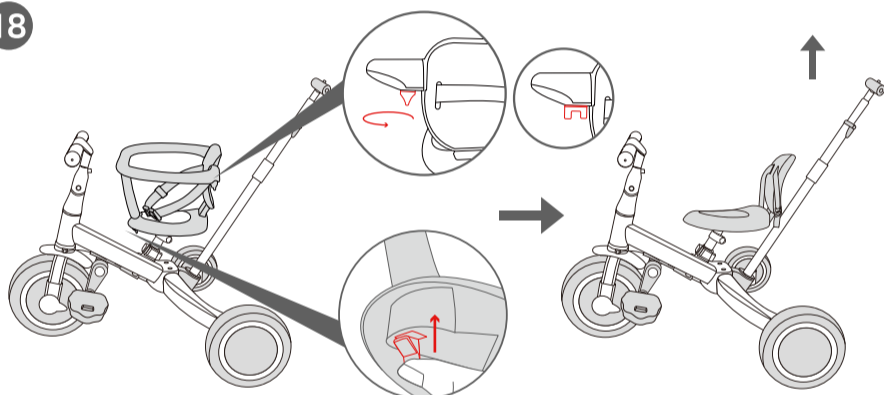


Rotate the button to unlock and remove the guard bar as shown.

19

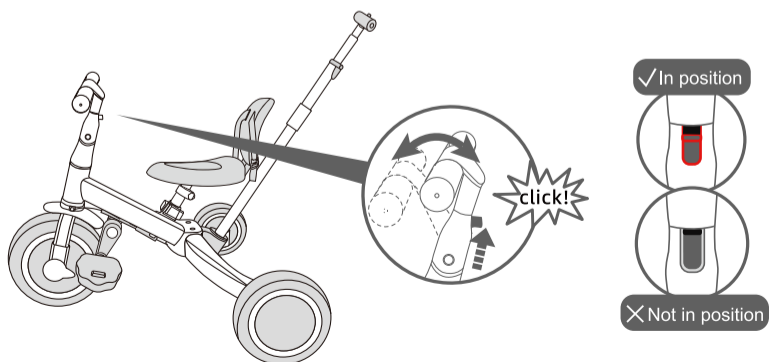


Adjust the handlebar and make sure it's locked as shown.

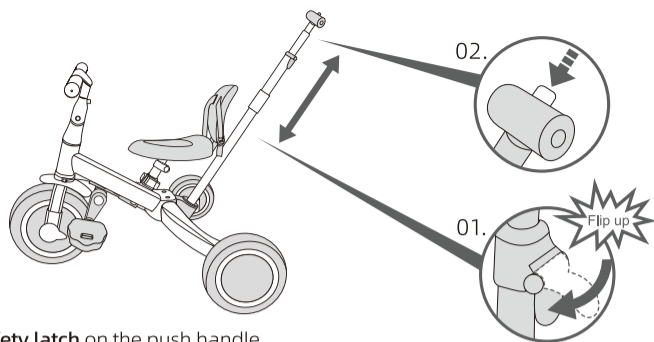

1. **Flip up the safety latch** on the push handle.
2. **Press and hold the button** at the top of the handle.
3. **While holding the button, adjust the handle:**
push down to lower or pull up to raise. There are three height settings.
4. **Release the button** and flip the safety latch down to secure the push handle.


How To transform to balance bike mode

21

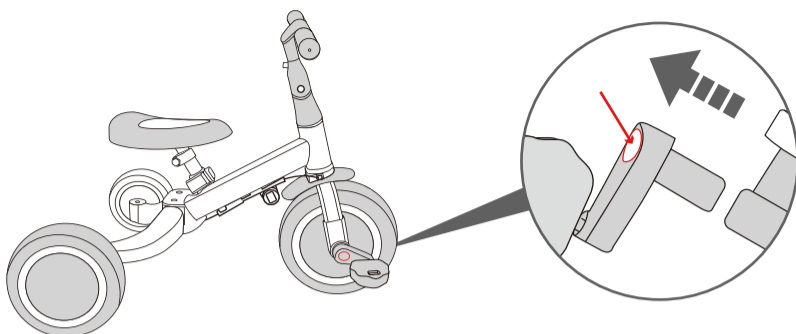


Press down the button and pull out the pedals.

22

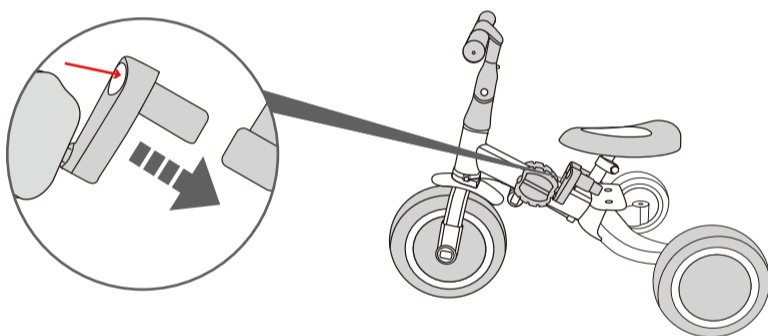

Insert the pedals into the pedal holders under the seat in balance bike mode.


23

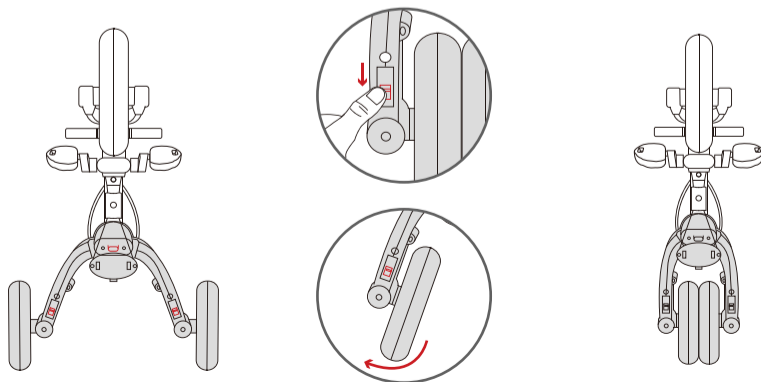

Refer to Steps 12 and 13 to combine the rear wheels into one for balance bike mode.

How To Adjust Handlebar


24

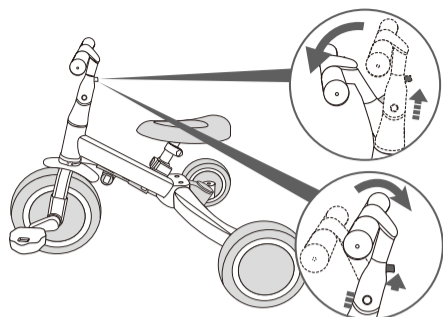

Push the button upward to adjust the handle to one of two positions and ensure it is locked with a "click"; otherwise, the handle may come loose, risking injury.

How to Adjust the Seat

25

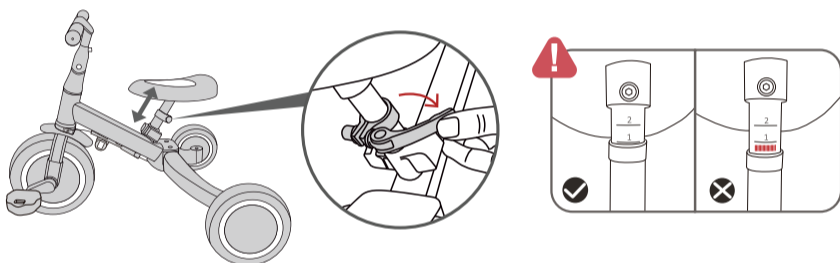


Refer to Step 7, after opening the clamp lever, you can adjust the most comfortable height for your child.

WARNING: For safety, ensure the seat is installed at or above "mark 1." Inadequate insertion may cause the seat to detach.

How to Adjust Height of Pushing Bar

26

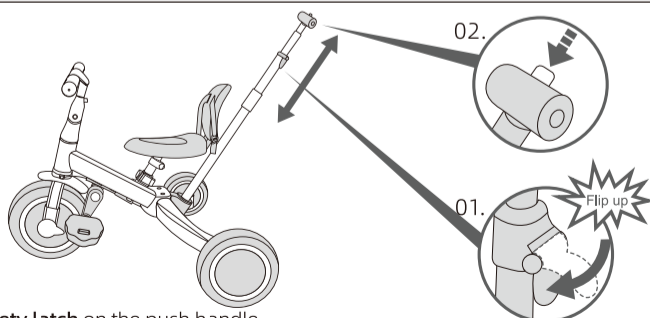

1. Flip up the safety latch on the push handle.
2. Press and hold the button at the top of the handle.
3. While holding the button, adjust the handle: push down to lower or pull up to raise. There are three height settings.
4. Release the button and flip the safety latch down to secure the push handle.

Product Care and Maintenance

- Please clean and wipe the balance bike with a dry cotton cloth.
- For the service life of the product, please add solid grease or anti-rust lubricant spray into the rotating parts regularly, such as axles and handlebar shafts.
- Check regularly if the screws are loose/falling off or the parts are worn. Please contact us at support@newyoo.net, if any screw or part is missing.

⚠ WARNING: TO AVOID SERIOUS INJURY:

- Continuous adult supervision required.
- Never use near motor vehicles.
- Never use near streets, swimming pools, hills, steps, or sloped driveways;
- Always wear shoes when using the tricycle.
- Never allow more than one rider.
- We recommend riders always wear a properly fitted helmet that complies with U.S. Consumer Product Safety Commission (CPSC) Standard 16 CFR 1203.
- Maximum Weight:
From 12 months to 36 months, the maximum load capacity of the children's tricycle bike mode is 18 KG.
From 36 months to 60 months, the maximum load capacity of the children's balance bike mode is 25 KG.
- The seat post insertion depth must exceed the minimum scale line on the saddle tube.
- Make certain that anyone who uses this tricycle has been fully instructed in its operation.
- Ensure that an adult has followed the assembly instructions to ensure the tricycle is assembled properly.
- Do not lift tricycle by the backrest or push handle.
- Make sure the handlebar, seat, backrest and front wheel are fully tightened before use.
- Skill is required to avoid falls or collision.